CIVE 210 – SAP 2000 Tutorial # 1 (Trusses)

The following Tutorial presents a Step-by-Step procedure for modeling and solving a 2-dimensional truss using SAP2000. The objective is to introduce students taking the Statics course to computer modeling in structural analysis. The tutorial will focus on determining axial forces in the members of the truss shown in Figure 1, in which all members are assumed to be pin connected. The truss is made of 9 members and is supported by a roller at D and a pin at F. Four concentrated loads are applied at joints A, B, C, and E. The coordinate system is as indicated by the arrows below.

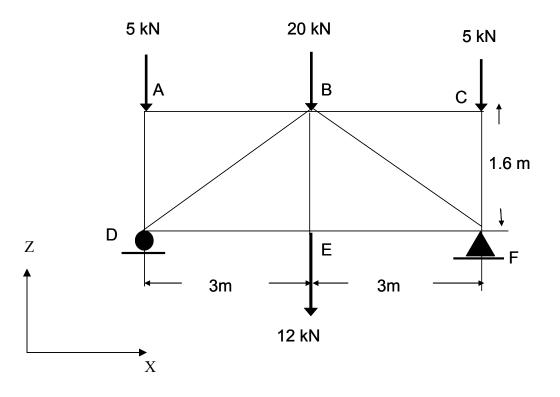


Figure 1: Example Truss Problem

In what follows is a step-by-step procedure for modeling and analyzing the Truss using SAP 2000. It should be noted that the illustrations provided in this Tutorial pertain to **Version 11** of SAP 2000. The use of any earlier version will result in some minor changes in the graphical interface, but should not differ from the representation shown in this tutorial significantly with regards to the main content.

The major tasks that are needed in modeling the Truss involve setting up the geometry of the truss, defining material and section properties and assigning a section to each member, defining element releases, and defining load cases and assigning values for the loads.

Step 1 – Setting Up the Truss Geometry

Before setting up the geometry, SAP2000 has to be activated by clicking on the SAP2000 icon. When you start SAP2000, you will get the following screen, so Click OK to start your analysis:

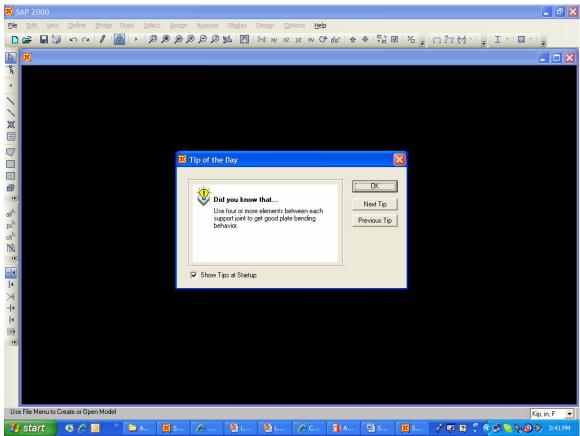


Figure 2: Start-up Screen in SAP2000

- Choose the required set of units (in this case kN,m) from the rightbottom corner of the screen. These will be the default units for the truss
- From the *File* menu, choose *New Model*. You will get a screen showing illustrations for different types of Structures (Figure 3). Choose the 2D-Truss Option to start the Problem. The next step will be to choose the type of Truss (left pull-down menu in Figure 4). As a general case, choose a vertical Truss as a basis for modeling the Truss shown in Figure 1.

lew Model Initiali	zation				
Initialize Mo	del from Defaults	with Units	iip, in, F 🔄		
🔘 Initialize Mo	del from an Exist	ting File			
elect Template -					
		<u>~~</u> ,	AM,	A	M
Blank	Grid Only	Beam	2D Trusses	3D Trusses	2D Frames
					Ţ
3D Frames	Wall	Flat Slab	Shells	Staircases	Storage Structures
		4~1			
Underground Concrete	Solid Models	Cable Bridges	Caltrans-BAG	Bridge Wizard	Pipes and Plates

Figure 3: Different Models in SAP 2000

The objective behind choosing a New Model is to start the problem with a Default truss that replicates as much as possible the Truss shown on Figure 1. The Default truss can then be edited (you can delete and add joints and members as you see necessary) to match exactly the truss in Figure 1. As such, the number of divisions of the Truss should be initially set to 2 with a Division length of 3m. The height of the truss should be set to 1.6m. The section Properties for the Truss can be defined at a later stage. As such, the properties for Chords and Braces can be kept as Default.

2D Trusses	
2D Truss Type Vertical Truss Sloped Truss Vertical Truss Pratt Truss	Vertical Truss Dimensions Vertical Truss Dimensions Division Length 3. Number of Divisions 2 Division Length 3. Height 1.6 1.6 1.6 1.6
	Use Custom Grid Spacing and Locate Origin Edit Grid
	Chords Default +
	Braces Default +
✓ Restraints	OK Cancel


Figure 4: 2D-Truss Properties

If the Truss to be analyzed has irregular geometry, a grid can be defined by clicking on "**Use Custom Grid Spacing and Locate Origin**" to get the Window in Figure 5. In this window, the "Ordinates" on the different Axes can be selected to produce a Grid on which the joints and the members can be located. Since the default plane for the 2-D truss is the X-Z plane, the user will have to define the grid spacing along the x-axis and the z-axis only by modifying the **Grid ID** column and the **Ordinate** column in Figure 5 below.

ystem	Name		SYS1		Units Kip,	in, F 💌	Grid Lines Quick Start
Grid Dal	a						
	Grid ID	Ordinate	Line Type	Visibility	Bubble Loc.	Grid Color 🔺	
1	×1	-216.	Primary	Show	End		
2	x2	-72.	Primary	Show	End		
3	x3	72.	Primary	Show	End		
4	×4	216.	Primary	Show	End		
5							
6							
- 7							
8							
Grid Dal	a						Display Grids as
	Grid ID	Ordinate	Line Type	Visibility	Bubble Loc.	Grid Color 🔺	Ordinates Spacing
1	y1	0.	Primary	Show	Start		• Ordinates (O Spacing
2	yı	0.	r ninaiy	311044	Start	_	
3							Hide All Grid Lines
4							,
5							Glue to Grid Lines
6							
7							Bubble Size 60.
8						-	
Grid Dal	a						
			_ _				Reset to Default Color
	Grid ID	Ordinate	Line Type	Visibility	Bubble Loc.		
1	z1	0.	Primary	Show	End		Reorder Ordinates
2	z2	144.	Primary	Show	End		
3							Locate System Origin
4							
5							
6							

Figure 5: Defining a Grid

- Now that the Truss model and the Grid Spacing have been defined, 2 windows showing a 3-D View of the Model and a 2-D View (x-z plane) will be shown. The 3-D view can be closed since it will not be needed in the analysis.
- Figure 6 shows the default 2-D truss. The truss now needs to be modified to match the truss shown in Figure 1. Members that are not needed can be deleted by selecting the member by clicking on it and then pressing Delete on the keyboard. Additional members can then be added by clicking on *Draw* from on main toolbar and then choosing *Draw Frame/Cable/Tendon* from the drop down list. Alternatively you can select the Draw Frame/Cable/Tendon *Button* to perform the same task. To define an element, click on a joint at the beginning of the element and than on the joint at the end of the element. To end a series of element definitions, simply double-click on the final joint.

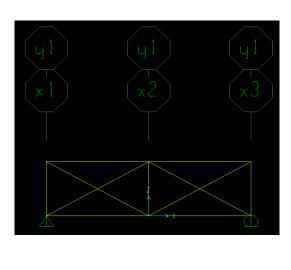

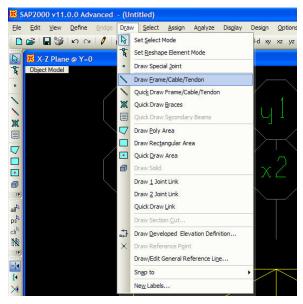


Figure 6: Default Truss Model

Figure 7: Drawing a New Truss Member

The next step after establishing the geometry of the truss is to define the supports at the joint. To define the location and type of structural support, select the support location by clicking on the joint with the mouse. A yellow "X" should appear at the joint to indicate that it is currently selected. Next click on the **Joint Restraint** button on the tool bar or choose **Assign** from the main drop down menu. Once you choose assign choose **Joint - Restraints** as shown in Fig 8. A window (Fig. 9) showing the main supports will be shown. You have the option of either assigning the directions in which the joint is restrained or quickly assigning typical supports from the Fast Restraints Option (Roller, Pin, Fixity, or Free end)

🔀 SAP2000 v11.0.0 Advanced - (Untitled)					
File Edit View Define Bridge Draw Select Ass	ign A <u>n</u> alyze Dis <u>p</u> lay Design	Options	He	elp	
<u></u>	Joint	•	14	Restraints	
🕅 🕱 X-Z Plane @ Y=0	Erame	÷		<u>C</u> onstraints	
Object Model	<u>C</u> able	Þ	¥	Springs	
	Tendon	Þ	0÷0	Masses	Joint Restraints
	Area	Þ		Local Axes	Some Reservines
$\sum_{i=1}^{n}$	Solid	F	4	Panel Zones	
	Link/Support	- F		Merge <u>N</u> umber	Restraints in Joint Local Directions
	J <u>o</u> int Loads	•	/		✓ Translation 1
	Frame Loads	÷			
	Cable Loads	+			✓ Translation 2 ■ Rotation about 2
	Tendon Loads	÷			
	Area Loads				🔽 Translation 3 📄 Rotation about 3
•	Soli <u>d</u> Loads	Þ			
A.	Link/Support Loads	Þ			Fast Restraints
DS ¹⁵	Joint Patterns				
al ^R pe ^R ch ^R	Assign to <u>G</u> roup				<u></u>
NR	Update All Generated Hinge Prope	rties			
	Clear Display of Assigns				Cancel
The second se	Copy Assigns				
x	Paste Assigns	b.	-		

Figure 8: Assign Joint Supports

Figure 9: Types of Supports

> The **Default** Truss that is created by SAP2000 and which was edited to resemble the Truss shown in Fig. 1 is created with **Default** supports (see Fig. 6). These supports need to be edited to match those presented in the truss in Figure 1. This can be done by following the steps outlined above to obtain the truss shown below in figure 10.

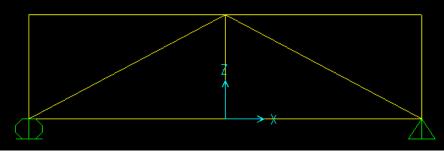


Figure 10: Truss with Correct Supports

- The next Step after defining supports is to assign properties to the Truss members. These properties include (1) *Material* Properties, and (2) *Frame Section* Properties. In order to do that, you have to define a Material and a Frame Section in SAP2000, and then assign these material and sections to the different members of the Truss. The properties of the material and the sections are generally needed for calculating displacements and rotations. For analyzing Truss problems, you are generally interested in calculating Forces only. As a result, the choice of the material and the sections will not have an effect on the calculated forces in a Linear Elastic Analysis.
- To define the properties of a material, select the **Define** menu located along the top the SAP2000 interface window and then click on **Materials**. The Define Materials window will appear as shown in Figure 11. On this menu you can define a new material or change the properties of an existing material. If you click on the **Add New Material Quick** Button, you will get the Window shown in Figure 12 from which you can choose the type of material and its properties. For the truss member, choose the material to be Steel and choose ASTM A36 as the specification for the type of Steel.

Define Materials			
Materials 4000Psi A992Fy50	Click to: Add New Material Quick Add New Material Add Copy of Material Modify/Show Material Delete Material	Quick Material Definition Material Type Specification	
	Show Advanced Properties	OK Cancel	





- To define the cross-section of a structural element click on the **Define** menu located along the top of the SAP 2000 window and then click on **Frame Sections.** The Define Frame Sections window will appear as shown in Fig.13. On this menu you can import a new section or modify the properties of an existing section. If you click on the **Import New Property** Button, you will get the Window shown in Figure 14 from which you can choose the type of material and its properties. Sap2000 will give you the option of using sections with different geometrical shapes and different materials such as Steel and Concrete (Figure 14).
- ➤ The Truss in Fig 1 will be assumed to have an I/Wide Flange Section. Once this option is chosen, SAP2000 will ask you to import I/Wide Flange sections from an input file named SECTIONS.PRO found in SAP2000 directory. Choose the W10x12 section and Press OK. Once this is done, you will get the window shown on Figure 15. Make sure that the material chosen for the section is ASTM A36 and press ok.

Properties	 Click to:
Find this property: FSEC1	 Import New Property
FSEC1	Add New Property
	Add Copy of Property
	Modify/Show Property
	Delete Property

Figure 13: Define Section Properties

Import Frame Section	Property			
- Select Property Type-				1
Frame Section Property	Туре	Steel	_	
Click to Import a Steel Se	ection			
		U		
I / Wide Flange	Channel	Tee	Angle	
· · · · · · · ·				Import Frame Section Property
nn l		\cap		Select Property Type
				Frame Section Property Type
Double Angle	Double Channel	Pipe	Tube	Click to Import a Concrete Section
The second se				
				Rectangular Circular Pipe Tube
Steel Joist				

Figure 14: Different Steel and Concrete Member Sections

/Wide Flange Section		
Section Name	W10×12	
Section Notes	1	Modify/Show Notes
Extract Data from Section Property	File	
Open File c:\program fi	les\computers and	Import
Properties	Property Modifiers	Material
Section Properties	Set Modifiers	+ A36 💌
Dimensions		
Outside height (t3)	0.2507	2
Top flange width (t2)	0.1006	
Top flange thickness (tf)	5.334E-03	3<
Web thickness (tw)	4.826E-03	
Bottom flange width(t2b)	0.1006	
Bottom flange thickness (tfb)	5.334E-03	Display Color

Figure 15: Properties of the Member Section

After defining the truss section, you need to assign the section to the truss members. To assign the cross-section properties of a structural element, select the element with the mouse and click on the **Assign** menu located along the top the SAP2000 interface window and then click on **Frame Sections.** You can assign the same section properties to multiple elements by selecting all the elements that share the same properties. The Frame Section name will appear next to each element selected. After the frame sections have been assigned the SAP2000 interface window will appear as follows:

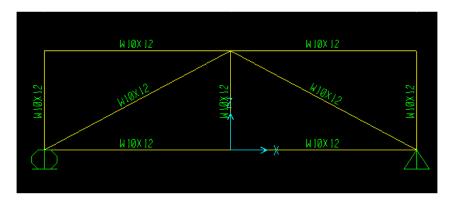


Figure 16: Assigned Sections for Different Truss Members

The last step that is needed before applying the loads is to ensure that the truss members are pinned at the joints. SAP2000 assumes that all structures are frames. Therefore, to analyze a truss structure we should convert each joint from a fixed connection to a pin connection. To ensure that every joint in the structure is pin connected, select all the members by clicking the **Select All** button on the tool bar. Next click on **Assign** menu and select **Frame** then **Releases/Partial Fixities** and the **Frame Releases** window will appear.

In this example, the structure is a truss, which by definition has no moment capacity at each joint. To release the moment capacity, click on the check boxes that are associated with the Moment 22, Moment 33, and Torsion. Torsion can only be released at one end of the element, whereas, the other moment must be released at both the Start and End of the element. After the moments are released, the truss structure should appear in the SAP 2000 interface window as if members are not connected. click on **Display**, then **Show Undeformed Shape** to get it back to its normal shape.

As	sign Frame Releases	5			
Γ	Frame Releases				
		Rele			l Fixity Springs
	Axial Load	Start	End	Start	End
	Shear Force 2 (Major)	Γ	Γ		
	Shear Force 3 (Minor)	Γ	Γ		
	Torsion	$\overline{\mathbf{v}}$	Г	0.	
	Moment 22 (Minor)	$\overline{\mathbf{v}}$	$\overline{\mathbf{v}}$	0.	0.
	Moment 33 (Major)	$\overline{\mathbf{v}}$	◄	0.	0.
	🔲 No Releases			<u> </u>	Cancel

Step 2 – Setting Up the Truss Loads

- The first step in defining loads is to define a Load Combination. To do that, click on **Define** in the main menu, and click on **Load Cases** in the drop down menu. The window shown on Figure 17 will appear. Choose a Name for the Load case, and a type. Loads can be Dead Loads, Live Loads, Earthquake Loads, Wind Loads, etc. In this problem, assume that the loads are dead loads.
- The second step is to set the Self-Weight Multiplier to ZERO since it is assumed in the truss analysis that the weight of the members is negligible. This step is very important since you will get wrong results if the self-weight multiplier is not set to ZERO. It should be noted that the self-weight multiplier is originally set to be equal to 1.0. Change the number to Zero and then click Modify Load.

Define Loa	ds					
DEAD DEAD	Load Name	Type DEAD DEAD	Self Weight Multiplier	Auto Lateral Load	•	Click To: Add New Load Modify Load Modify Lateral Load Delete Load Show Load Notes OK Cancel

Figure 17: Defining a Load Combination

The third step is to assign loads to the joints. To apply forces at a joint, select the joint with the mouse and click on the **Assign Joint Loadings** button or click on **Assign** from the main menu and then click on **Joint Loads** and then on **Forces**. The following menu will appear:

In this example, there are four (4) forces acting on (4) joints. Remember that the truss was modeled in the x-z plane, therefore the forces are acting in the negative z-direction. For the top middle joint, enter -20 kN in the **Forces Global Z** input field and click **OK**. The specified forces will be displayed on the truss in the proper direction and magnitude.

loint Forces		
Load Case Name + DEAD Loads Force Global X Force Global Y Force Global Z Moment about Global X Moment about Global Y Moment about Global Z	0. 0. -20 0. 0. 0. 0. 0. 0. 0. 0.	Units KN, m, C Coordinate System GLOBAL Options C Add to Existing Loads Replace Existing Loads C Delete Existing Loads OK Cancel

Step 3 – Setting Up the Analysis Options and Running the Analysis

Now that the geometry of the Truss and the applied loads are set, you are ready to run the analysis. In this example, the truss structure is modeled in the x-z plane. To limit analysis to variables in the x-z plane click on the *Analyze* menu located along the top the SAP2000 interface window and then click on *Set Options*. The *Analysis Options* menu will appear as shown on Figure 18. To restrict SAP 2000 to variables in the x-z plane, select the **Plane Frame** button and click **OK**.

Analysis Options	
Available DOFs	
VUX VUY VUZ VRX VRY VRZ	
Fast DOFs Space Frame Plane Frame Plane Grid Space Truss	OK.
	Cancel
	Solver Options
Automatically save Microsoft Access or Excel tabular file after ana File name	lysis
Database Tables Named Set Group	V

Figure 18: Setup Analysis Options

The truss structure is now ready for analysis. To analyze the model, press the *Run Analysis* button or choose *Analyze* from the main menu and then click *Run Analysis*. In the window that follows, select the DEAD load combination and press *Run Analysis*. If the analysis is successful, the *Analysis Complete* window will appear and report that the analysis is complete (Figure 19). Click **OK** and the SAP2000 interface window will display an exaggerated deflected shape of the modeled structure (Figure 20).

art Time: 12/2/20 ish Time: 12/2/20					ed Time: Status:)2 Analysis Ci	omplete		
* * WARN	ING**	*								
NUMBER OF MOD			D TO	THE NU	MBER OF	MASS	DEGREES	OF FREE	DOM	
Iteration	Approximat	ions t	o nex	t 5 ei	genvalu	es. f	rom shit	t EV= 0.	000000E+0	0
									9587766E+0	
found mode	1 of			1.5015	172E+05	, f=	61.671	L611, T=	0.01621	5
ound mode	2 of	9:	EV=	5.2798	356E+05	, f=	126.122	2993, T=	0.00792	9
Found mode Found mode			EV=	2.0547	377E+06		228.138	3368, T=	0.00438	3
found mode	4 of	9:	EV=	3.6919	089E+0€	, f=	305.805	5731, T=	0.00327	0
found mode										
found mode				5.6004	204E+0€	, f=	408.889	9474, T=	0.00244	6
found mode									0.00238	
found mode	8 of			5.9223	292E+06	, f=	418.741	1743, T=	0.00238	8
found mode	9 of			7.1912	091E+06		426.796	5736, T=	0.00234	3
UMBER OF EIG	EN MODES F	OUND								
UMBER OF ITE			D							
UMBER OF STI										
	S COM								14:24:5	2 .

Figure 19: Analysis is Successfully Completed

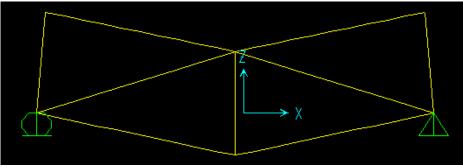


Figure 20: Deflected Shape of the Truss

To display the reactions, click on **Display** in the main menu and then click on **Show Forces/Stress** and then on **Joints**. Choose the DEAD load combination and then Press OK. You will get a display of the reactions as shown in Figure 21.

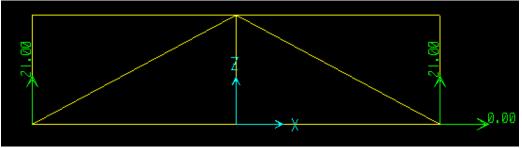
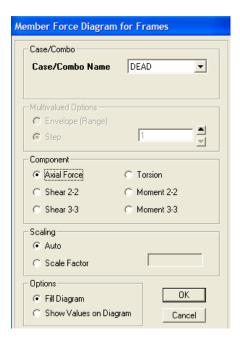


Figure 21: Display of Reactions at the Joints

To determine the magnitude of the forces in the truss, click on Display in the main menu and then click on Show Forces/Stress and then on Frames/Cables. The Member Force Diagram for Frame menu will appear as follows:

The default values will display the **Axial Forces** using the **Fill Diagram.** If you click **Axial Force** SAP2000 interface window will display the relative magnitude of the axial forces with compression forces in red and tension forces in yellow as seen in Fig. 22. Another way to display force information is to unclick **Fill Diagram** and click on **Show Values on Diagram**. In this case, the value of each axial force will be displayed as shown in Fig. 23



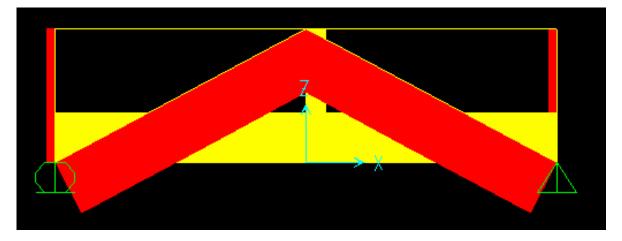


Figure 22: Relative Magnitudes of Forces in Members

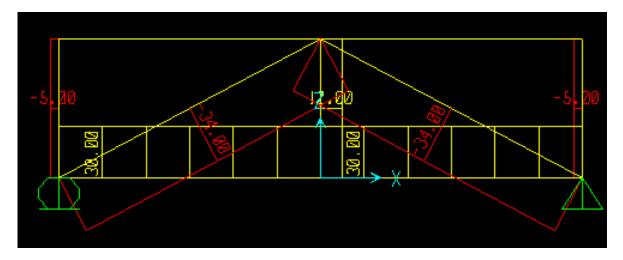


Figure 23: Magnitudes of Forces in Members